

## QUICK INSTALLATION GUIDE

 
### ⚠️ WARNING

#### Excessive Weight Hazard

Use two or more people to move and install the dryer. Failure to follow this instruction may result in back injury or other injuries.

### 1 REMOVE THE PACKING MATERIAL

Make sure to remove the lower packaging for a proper operation of dryer.

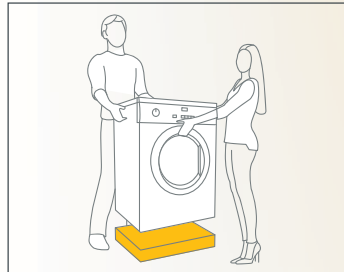


### 2 PLANNING THE VENTILATION SYSTEM

- Select the straightest and most direct route.
- Plan the installation to use the fewest possible number of bends.
- Allow as much room as possible for the bends.
- Bend the vent gradually to avoid kinking.
- Have no more than 4 times of 90° bends.

### 3 THIS DRYER MUST BE EXHAUSTED OUTDOORS

This dryer must be exhausted outdoors. Inadequate ventilation can cause moisture and lint accumulation in the house, which may result in: Moisture damage to woodwork, furniture, paint, wallpaper, carpet, etc., as well as problems with cleaning the house and health.

 ⚠️ If using an existing ventilation system, clean lint from the entire length of the system and make sure the exhaust hood is not plugged with lint. Review the ventilation system and modify it if necessary.

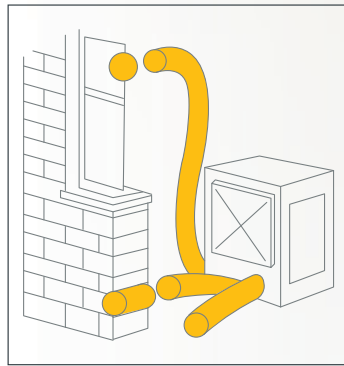

### ⚠️ WARNING



#### Fire Hazard

Keep flammable materials and vapors, such as gasoline, away from the dryer. Place the dryer at least 460 mm above the floor for a garage installation. Failure to follow these instructions may result in fire, explosion or death.

### ⚠️ WARNING




#### Electrical Shock Hazard

Plug into a earthed 3-pins wall outlet. Do not remove the earthing terminal. Do not use an adapter. Do not use an extension cable. Failure to follow these instructions may result in electric shock, fire or death.

### 4 CONNECT THE EXHAUST DUCT TO THE DRYER EXHAUST OUTLET


⚠️ Inadequate ventilation may result in the accumulation of moisture and lint in the household, which may result in: moisture damage to the woodwork, furniture, paint, wallpaper, carpet, etc., as well as problems with cleaning the house and health.

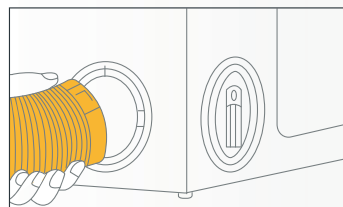

### 5 MOVE THE DRYER TO ITS FINAL PLACEMENT

You will need:

 
- A separate 10 amp circuit.
- A level floor with a maximum slope of 25 mm under the dryer.
- The dryer should not be installed or stored in an area where it may be exposed to water and/or the weather.

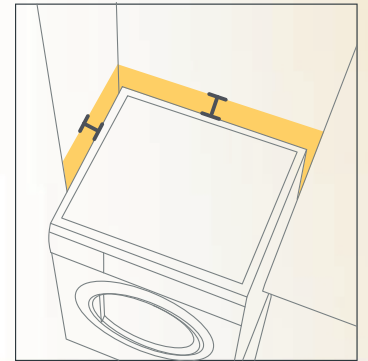

### 6 CHECK THE LEVELNESS OF THE DRYER



Unscrew the nut to adjust the leveling legs. Adjust the height of the leg and screw the leg nut again.

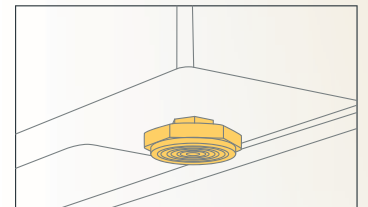


### 7 CONNECT YOUR DRYER

Plug the power supply cable into an outlet with earthing.



If the power cable is damaged, it must be replaced with an original power cable and this replacement must be done by a qualified electrician.

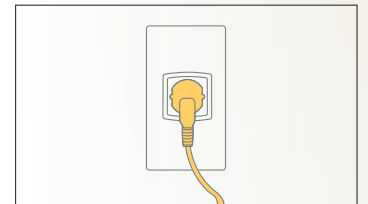

### 8 COMPLETE INSTALLATION CHECKLIST:

- Check to make sure that all parts are installed. If there is an extra part, go through all the steps again to see if any was skipped.
- Check that you have all of your tools.
- Dispose of/recycle all packaging materials.
- Check the dryer's final placement. Be sure that the exhaust vent is not crushed or kinked and is exhausted outdoors.
- Check that the dryer is levelled.
- Clean the inside of the dryer drum thoroughly with a damp cloth to remove any dust.
- Read "Safety guide" in the user manual.
- Select the cycle of 15' Drying Time and start the dryer. If the dryer does not work, check the following:
  - A drying cycle has been selected and the START/PAUSE button has been pressed.
  - The dryer is connected to the outlet and/or the power supply is turned on.
  - The household fuse is intact and tight, or that the circuit breaker has not been tripped.
  - The dryer door is closed.







You may notice an odor when the dryer is heated for the first time. This odor is common when the heating element is used for the first time. The odor will disappear eventually.

## QUICK USE GUIDE

1

### CHECK THE LABEL THAT IS FOUND ON THE CLOTHING

Care labels that you may find on fabric:

 
 - Suitable for dryers	 - Dry at medium heat
 - Dry at high heat	 - Do not tumble dry

! Install the drying rack if you want to dry shoes.

2

### CLEAN THE LINT FILTER

Clean the lint filter before every load.

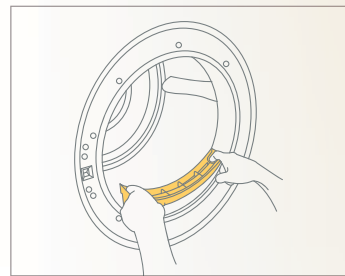

3

### LOAD THE DRYER



Open the door by pulling the handle.

Put the clothes into the dryer.

Close the door.

! Do not over-load the dryer. Drying items must be able to rotate freely.

Over-loading the dryer may result in compromised drying performance and may increase wrinkles and tangles.

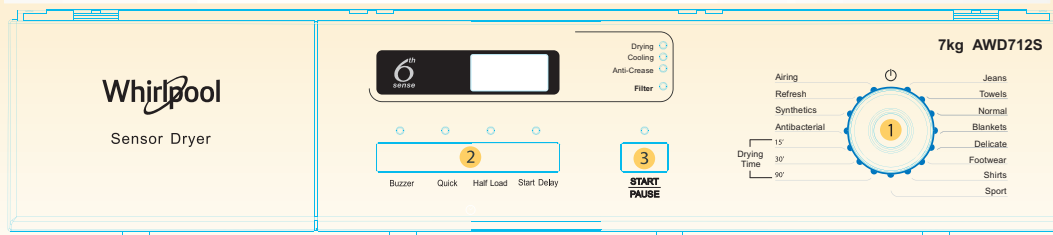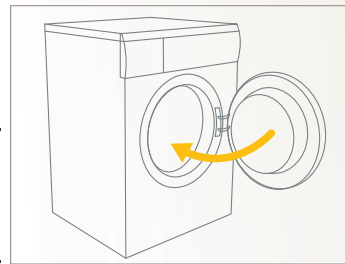

4

### SELECT CYCLE

Select the desired cycle for your load, 1

For more information about each cycle, see the "Cycle guide" in the user manual.

5

### SELECT OPTIONS

Select the desired options, 2

You can adjust different settings depending on the cycle that you have selected. See the "Cycle guide" in the user manual for more detailed information.

! Not all options are available with all cycles. Quick option and Half Load option cannot be selected at the same time.

6

### START/PAUSE


Press START/PAUSE to start the cycle. 3

! If the dryer does not start, press the button on the back of the dryer to reset the protection thermostat and press Start/Pause again. If the problem persists, check if the ventilation system is obstructed or contact your service agent or qualified personnel.

7

### WHEN CYCLE ENDS

Remove clothing as soon as the cycle has completed in order to reduce wrinkles.

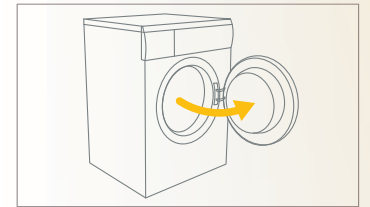


8

### TO USE THE DRYING RACK:

 ! Do not remove the lint filter.

- Open the dryer door.
- Place the rear bracket on the back edge of the dryer and support the two hooks that are at the front part of the drying rack on the door opening.
- Place wet items on the drying rack. Leave space around the items so that the air may circulate. The drying rack does not move, but the drum will rotate; be sure to leave adequate space between the items and the inside of the dryer drum. Make sure that items do not hang by the edges or between the grills.
- Close the door.
- Select a **Footwear** cycle to dry shoes. **Synthetics** to dry, for example, sweaters and **Airing** to dry items that contain foam, rubber or plastic.
- Start the dryer.

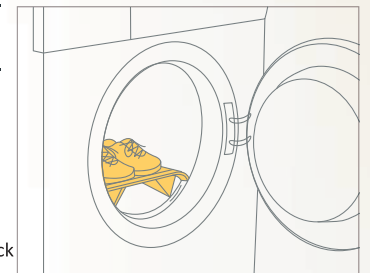

! After the cycle has ended, check the lint filter and remove the accumulated lint from items that have been dried on the drying rack.